

Rail Band Spec


Reference calculator

	Nose	Center	Tail
RAIL SIDE			
Board Thickness	1 5/16"	2 1/2"	1 9/16"
Tapered Rail Thickness	—	—	—
Apex Thickness	9/16"	3/4"	9/16"
Apex Center	1/2"	1"	5/8"
Rail Mark 1	13/16"	1 3/8"	7/8"
Rail Tuck 1	1/4"	5/8"	—
Corner Cut (Rail)	3/4"	1 5/16"	13/16"
DECK SIDE			
Domed Deck Band	—	—	—
Deck Mark 1	1 7/8"	2 1/2"	1 7/8"
Deck Mark 2	15/16"	1 1/4"	15/16"
Deck Mark 3	3"	4"	3"
Corner Cut (Deck)	1/16"	1/16"	1/16"
BOTTOM			
Bottom Tuck 1	1/8"	5/16"	—
Bottom Tuck 2	1/16"	3/16"	—
Bottom Tuck 3	1/4"	5/8"	Hard Edge

Rail Band Plots (1:1 scale)


Nose

Flat · Family Medium · Ratio 60/40 · plotted 1:1 actual size (cropped to 7" off centerline)

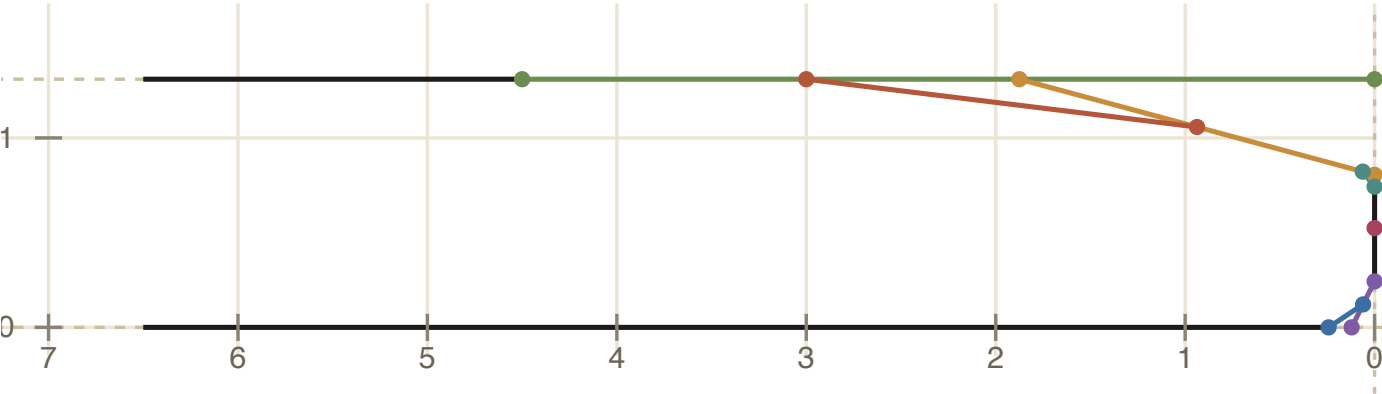


Center

Flat · Family Medium · Ratio 60/40 · plotted 1:1 actual size (cropped to 7" off centerline)

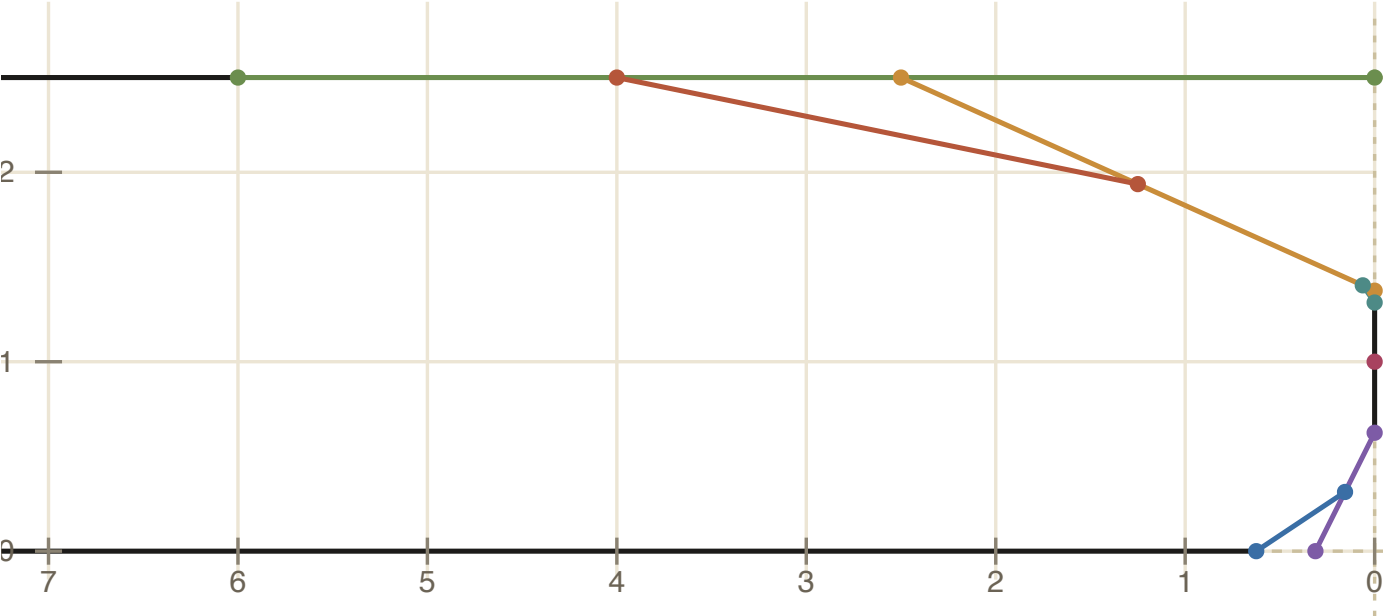


Tail

Flat · Family Medium · Ratio 60/40 · Hard Edge · plotted 1:1 actual size (cropped to 7" off centerline)

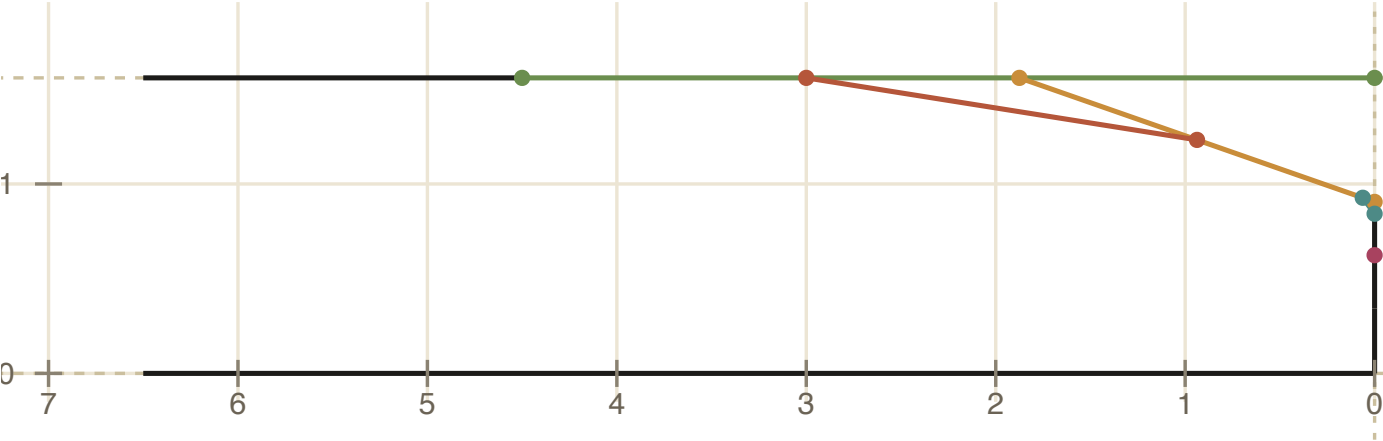

Understanding Rail Markings

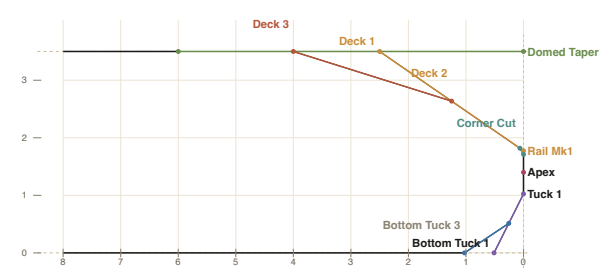


Turning Marks Into Rail Bands

Toggle on/off Markings and Bands using the check boxes.

1. Use Deck Marks (solid lines) as a guide to blend the Deck Bands into the nose and tail (dashed lines) smoothly. The green Deck Mark 3 Center (full board) line is an example of what the band would look like without tapering.
2. Use Rail Marks (solid lines) as a guide to blend the rail side of the Deck Bands toward the nose and tail (dashed line).
3. The Bottom Tuck (solid line) band should blend into a hard edge around 16-22" from the tail (dashed line).

☒ Deck Marks 1 ☒ Deck Band 1 ☒ Deck Marks 3 ☒ Deck Band 2 ☒ Deck Mark 3 Center (full board) ☒ Rail Marks 1
☒ Rail Band 1 ☒ Rail Tucks 1 ☒ Tuck blend to hard tail

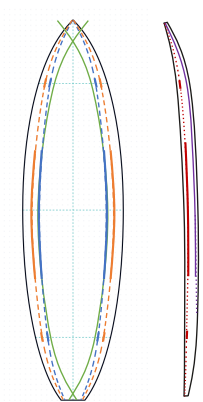

This rail band calculator is intended to provide a quantitative aspect to shaping consistent surfboard rails. It's recommended to understand how rail shapes affects surfboard performance, and how these marks can result in producing your desired outcome.